


Diagnostic Section - How to check and erase the SES light.


Select your transmission type, then press "Enter".

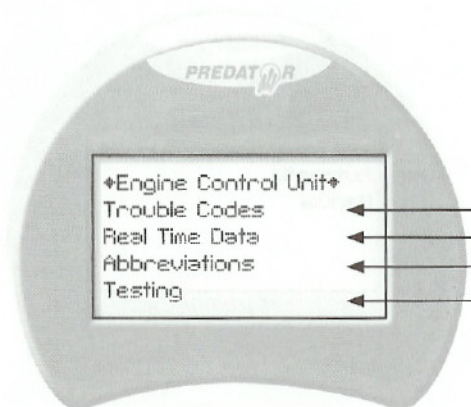

- **Trouble Codes:** Allows user to view and erase trouble codes
- **Real Time Data:** Displays live data
- **Abbreviations:** Displays the abbreviations used in live data
- **Testing:** This menu is used for troubleshooting only




Select "Trouble Codes"

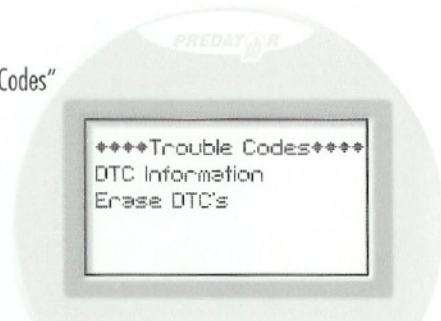

Diagnostic Section - How to check and erase the SES light.

To view the specific trouble code, select "DTC information".

DTC stands for Diagnostic Trouble Code.

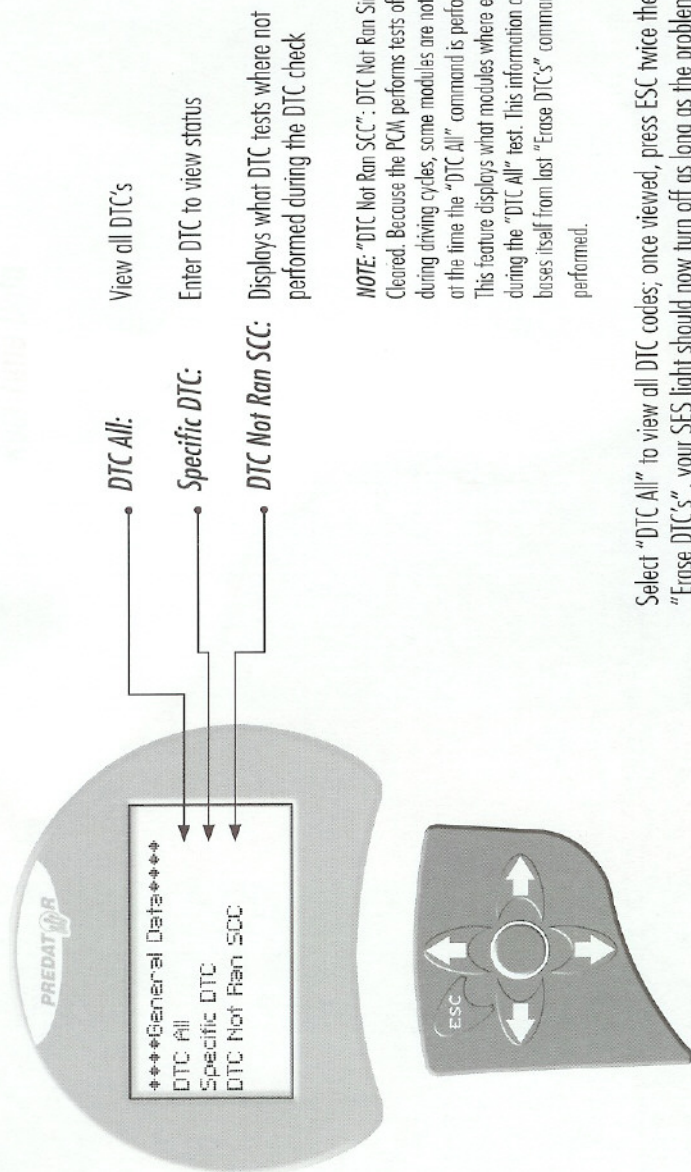

NOTE: "DTC Not Ran SCC": DTC Not Ran Since Code Cleared. Because the PCM performs tests of modules during driving cycles, some modules are not tested at the time the "DTC All" command is performed. This feature displays what modules were excluded during the "DTC All" test. This information always buses itself from last "Erase DTC's" command performed.

Select "DTC All" to view all DTC codes; once viewed, press ESC twice then select "Erase DTC's", your SES light should now turn off as long as the problem is fixed.